
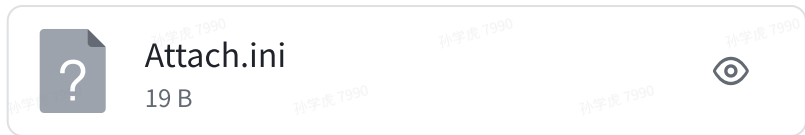


KEIL ATTCH

需要KEIL attach 功能需要如下操作：

- 以下红框中的选择框取消勾选
- 设置 Initialization File

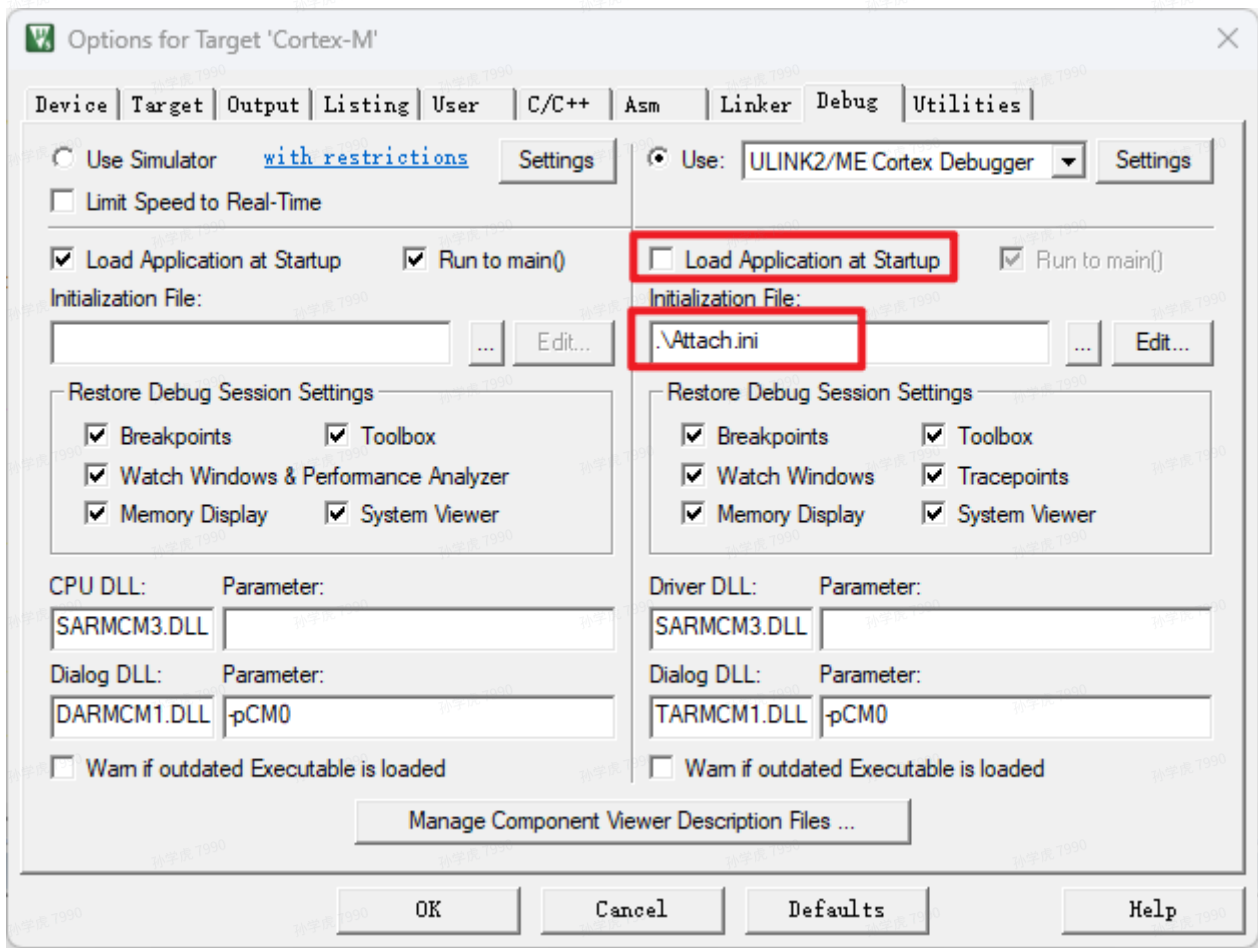

Cortex JLink/JTrace Target Driver Setup

DebugTraceFlash Download

J-Link / J-Trace Adapter

SN:69409634

Device:J-Link

HW:V9.40dll:V7.22b

FW:J-Link V9 compiled May 7 2

Port:SW

Max5 MHz

Auto Clk

SW Device

	IDCODE	Device Name	Move
SWDI	0x6BA02477	ARM CoreSight SW-DP	<div>Up</div> <div>Down</div>

☒ Automatic Detection

ID CODE:

☐ Manual Configuration

Device Name:

Add

Delete

Update

IR len:

Connect & Reset Options

Connect:Normal

Reset:Normal

☐ Reset after Connect

Cache Options

☒ Cache Code

☒ Cache Memory

Download Options

☐ Verify Code Download

☐ Download to Flash

Interface

☒ USB☐ TCP/IP

Scan

State: ready

TCP/IP

Network Settings

IP-Address:127 . 0 . 0 . 1

Port (Auto:0

Autodetect

Ping

Misc


JLink Info

JLink Cmd

确定

取消

应用(A)

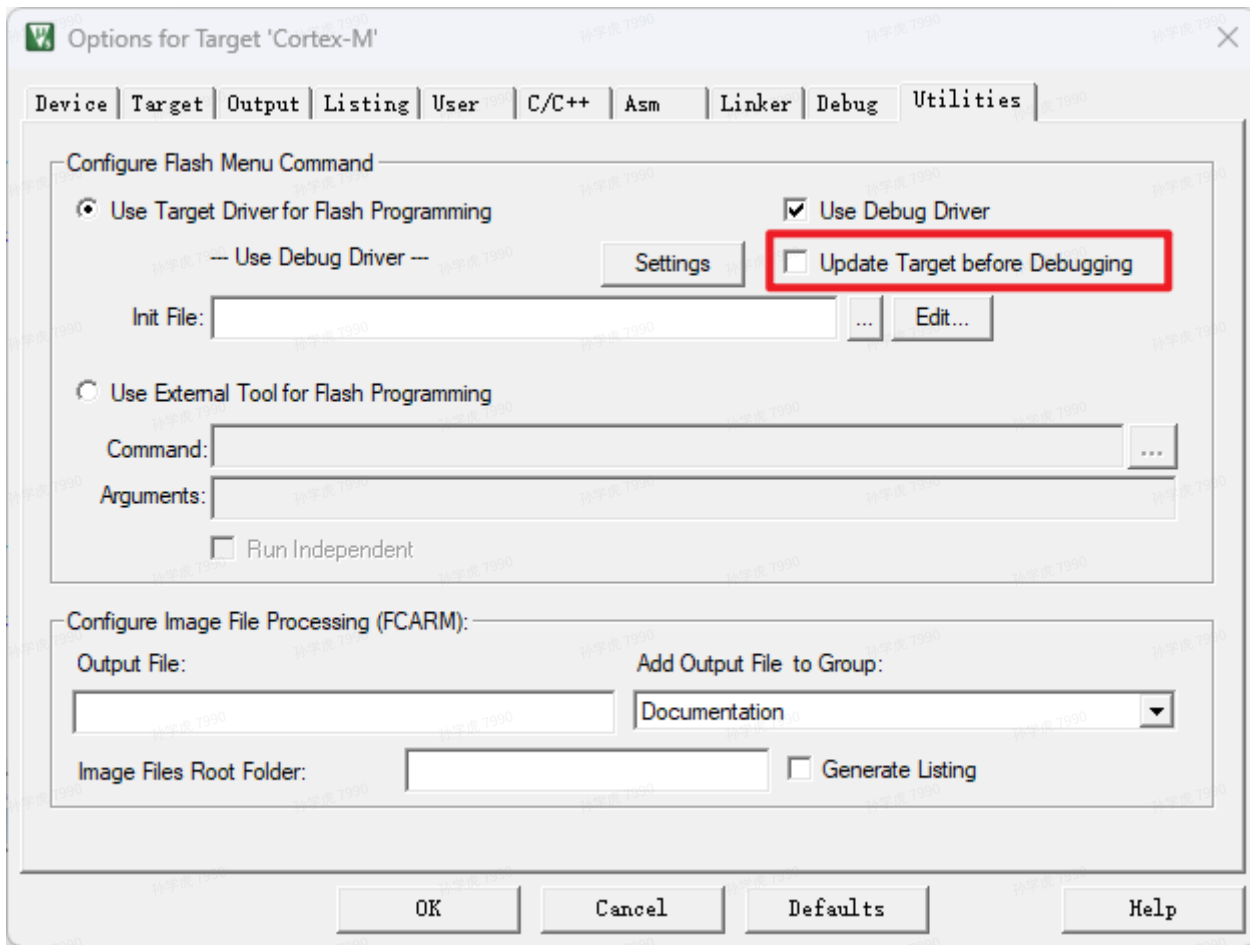

不需要KEIL attach 功能(正常使用KEIL的常规功能)需要如下操作:

- 将上面3个红框中的选择框勾选
- Attach.ini不需要关心，可以保留也可以删掉